

Assembling pan/tilt Mechanism

The pan/tilt mechanism when combined with Pixy, makes a fun demo — a good “hello world” for Pixy (no Arduino required). The Pixy pan/tilt mechanism comes in a kit and requires some assembly.

You will need the following (in addition to a Pixy and a pan/tilt kit):

A small phillips screwdriver



needle-nose pliers




small wire cutters




There are lots of different types of fasteners included in this kit. Refer to the picture below to help you find which fastener we are referring to in these instructions.




1. Find one of the long servo horns inside one of the servo baggies, and clip it on the 3rd hole from the end.

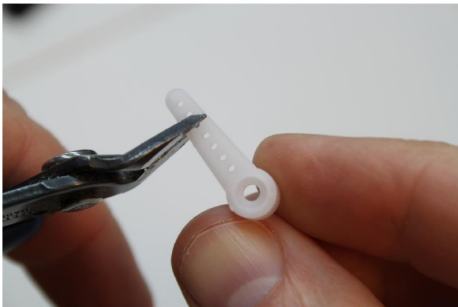

2. Put the servo horn on the servo and check both ends of travel. You can do this by moving the horn all the way to the right:

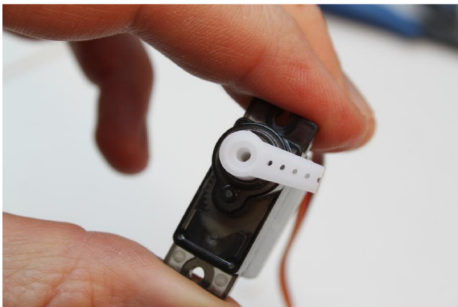


and then all the way to the left:

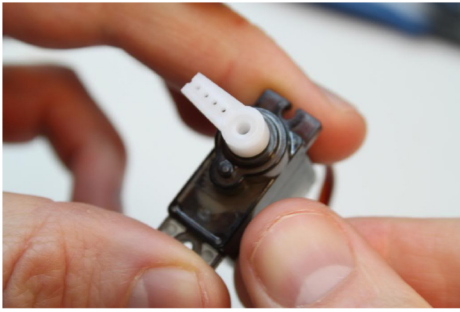


and adjusting the mounting angle of the horn such that the center of travel has the servo horn pointing downwards. Note, it's OK to move the servo in this way even though it requires a fair amount of force. And it makes a cool sound!


3. Find one of the **servo horn fasteners** in the one of the servo baggies. (Refer to the fastener picture above.) Screw the servo horn tightly. (In the picture below, the servo is shown with the servo horn pointing downwards, which should be roughly the center of travel.)

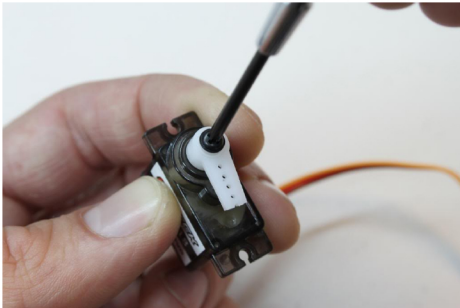


4. Remove the paper backing on the pan/tilt body (the smaller of the two acrylic parts).

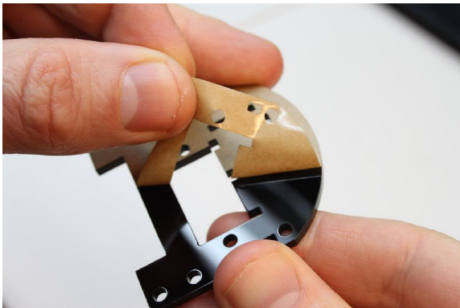


5. Fit one of the servo mounting tab into the slot on the pan/tilt body.

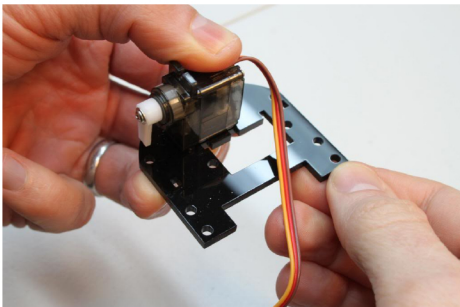


6. Flip the body over and thread a cable tie through the cable tie slots in the body.

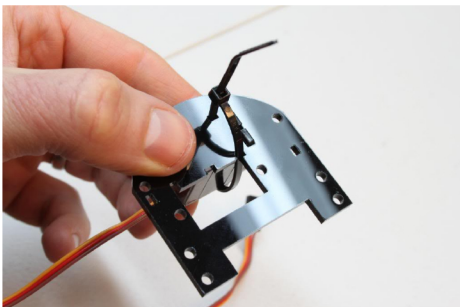



7. Thread another cable tie through the other cable tie slots in the body.

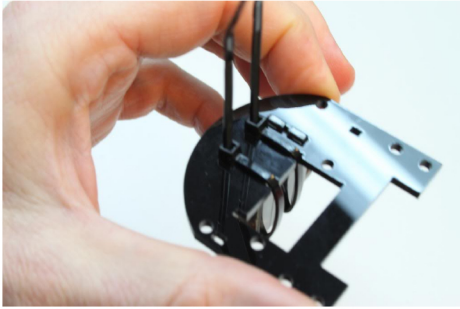


8. Tighten both cable ties by using pliers. It requires quite a bit of force to fully tighten!

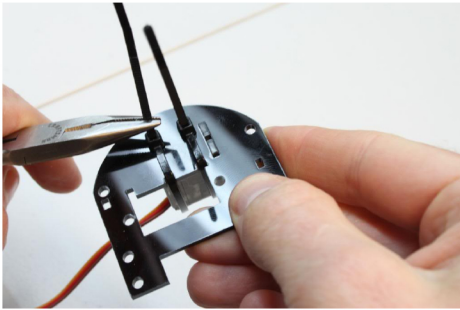

9. Take the 2nd servo and place in the other hole in the body as shown in the picture. Note that the wires for the servos are pointing in opposite directions.

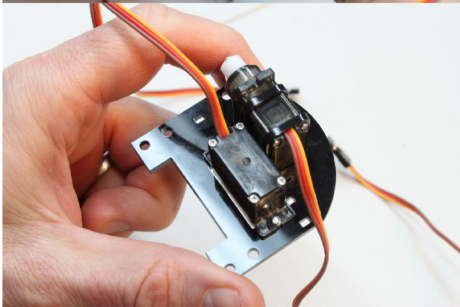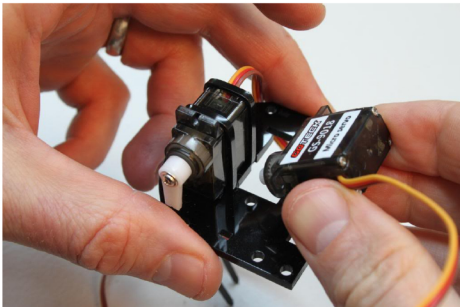


10. Grab two of the **long 4-40 fasteners**. (Refer to the fastener picture above.) Use these fasteners secure the 2nd servo.

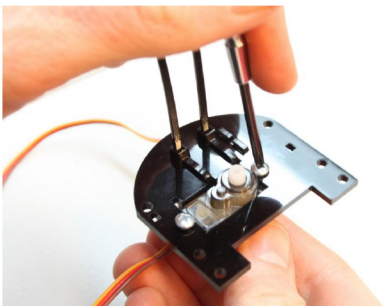

11. Take all five right-angle brackets out and examine them. Notice that three of them have **two** threaded holes and two of them have **one** threaded hole. We'll call these two-threaded and one-threaded brackets, respectively. Go ahead and separate these two bracket types to make things easier.


Grab a two-threaded bracket. If you look really closely, you'll notice that one of its legs is ever-so-slightly longer than the other. Say what? It's true--- I don't know why. But you can best see this by looking at the holes in the bracket. One of the holes is centered in its leg and the other hole is not centered, because its leg is slightly longer. Weird.

Take two **long 4-40 fasteners** and attach two two-threaded brackets to the body as shown in the pictures below. **Attach them such that the short legs are touching the body and the long legs are pointing up.**

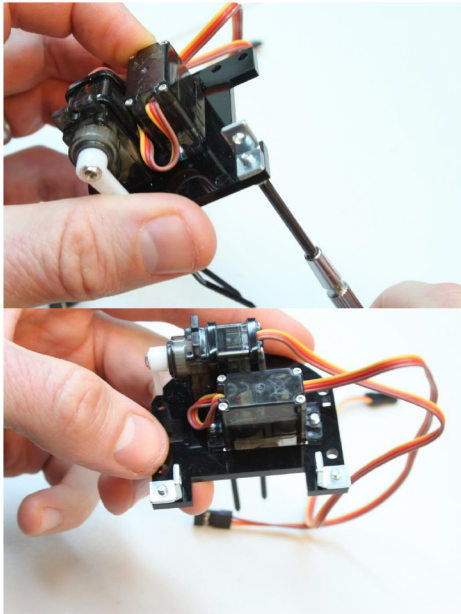


Nice. Now put this assembly aside for now.


12. Take your Pixy and attach two one-threaded brackets to it as shown in the picture below. Use two **short 4-40 fasteners** to do this. (Refer to the fastener picture above.)

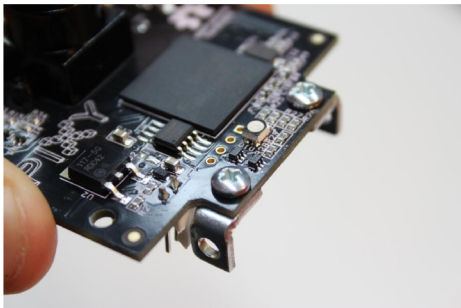


13. Take two nylon bushings and press them into the non-threaded holes in these brackets.

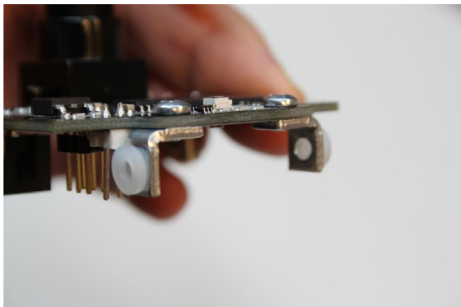


14. Slide the Pixy into the body assembly. Use two **long 4-40 fasteners** and insert them from the outside as shown in the picture. The 4-40 fasteners will form an axle for Pixy to use for tilting. Make sure that the brackets are mounted squarely--- this can cause binding. Tilt Pixy back and forth a couple times and make some adjustments if you feel some binding.

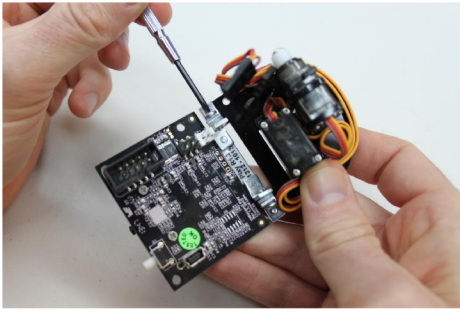


15. Plug in the servo wires into the servo connector on Pixy. (The servo connector is the little 6-pin connector labeled J3.) The pan axis goes on the left and the tilt axis goes on the right, and the yellow wires on both connectors face up. (Which is the tilt axis? It's the one with the servo horn.)

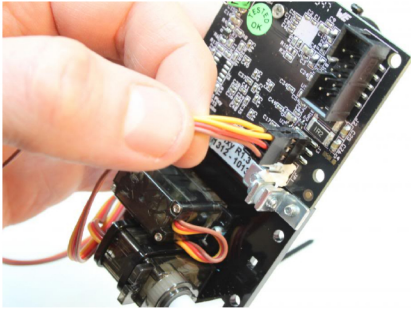


16. Use a cable tie to secure the wires to the body as shown. String the cable tie through the single slot in the body and around the outside. Do not tighten the cable tie fully yet.

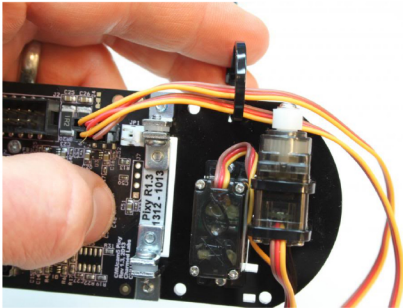


17. Use the slots on the other side of the body to thread another cable tie and secure the wires on the other side as shown. The wires are longer than they need to be, so it requires some artistic arranging. Do not tighten this cable tie fully either.

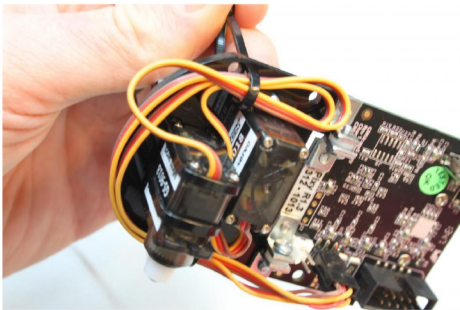


18. Verify that there is enough slack in the cables to allow Pixy to tilt fully forward and backward.

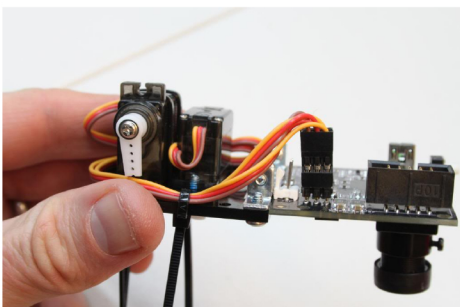


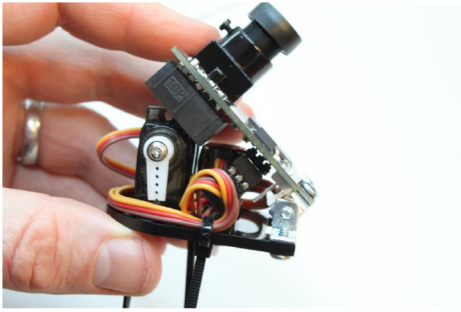


19. When you're happy with the cable situation, make the ties snug, but not too tight (to save the wires) then flip over the assembly and clip the ends of the cable ties.

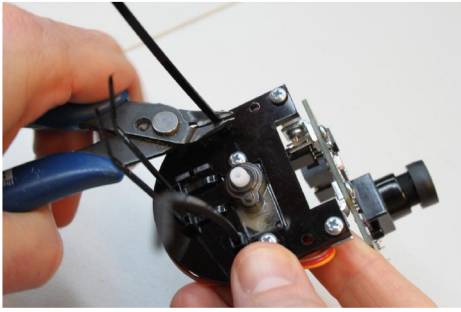


20. Remove the paper backing from both sides of the pan/tilt base.

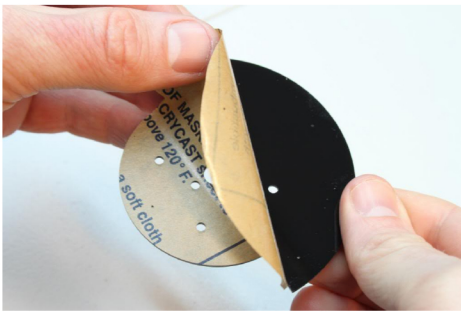

21. Grab a circular servo horn from one of the servo baggies and attach it to the pan/tilt base with two **short tapping fasteners**. (Refer to the fastener picture above.) The servo horn has lots of holes -- rotate the servo horn until the holes on the servo horn line up with the holes in the pan/tilt base.

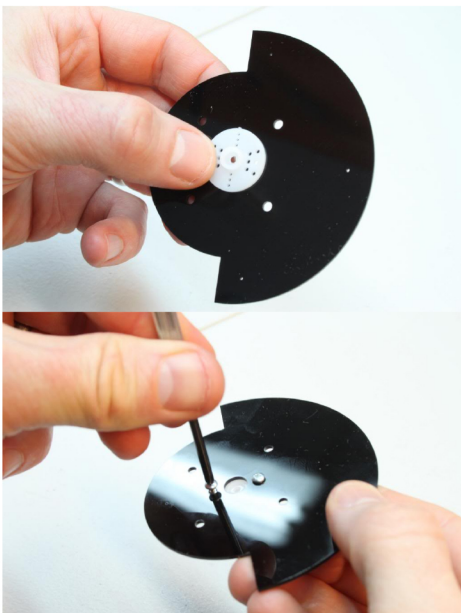


22. Attach rubber feet to the bottom of the base as shown. There are little holes in the pan/tilt base that are there to help you position the rubber feet.

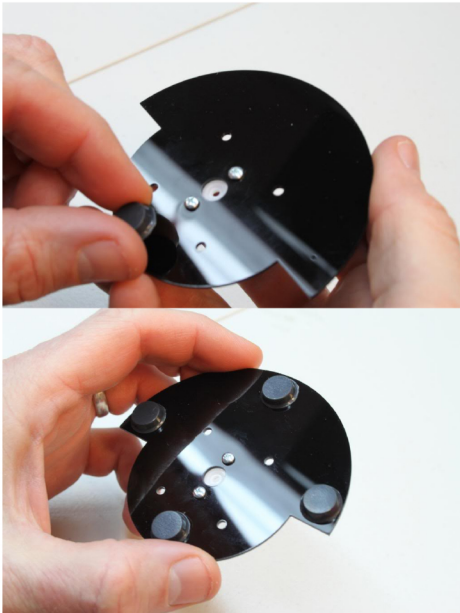


23. Place the body assembly on the base assembly by attaching the horn to the pan servo. (The pan servo is the servo without the servo horn sticking out of the bottom.) Attach the servo horn such that the center of travel has the wide part of the base facing forward (where the camera lens is pointing). You can do this by moving the horn all the way to the right:



and then all the way to the left:

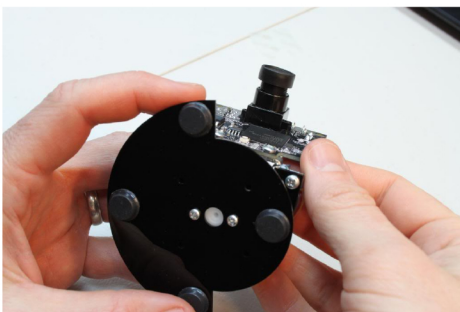


24. Find one of the **servo horn fasteners** in one of the servo baggies and attach the base to the body. (Here, the wide part of the base is facing forward, which should be close to the center of travel.)

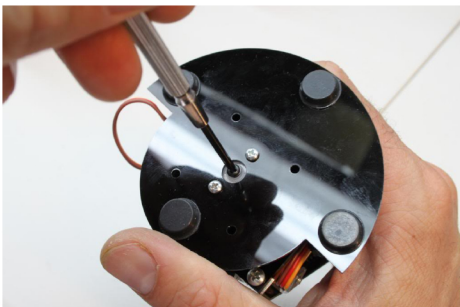


25. Place a **short 4-40 fastener** through the eyelet of the wire pushrod and attach it to a two-threaded bracket, **but don't tighten fully**. The pushrod needs to be able to pivot around the screw. Attach the pushrod and fastener to the


longer leg of the bracket.

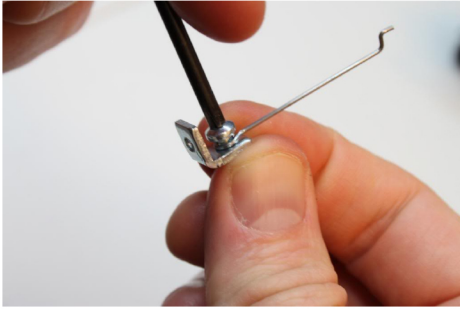

26. Thread the pushrod into the bottom hole of the tilt servo horn. You need to insert the pushrod past the second bend.

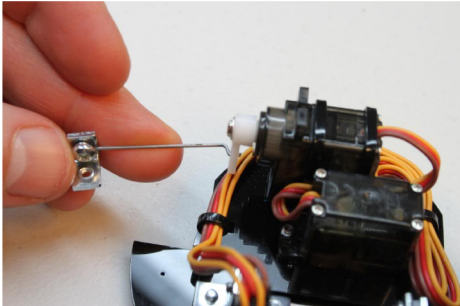

27. Attach the bracket to Pixy with a short 4-40 fastener.

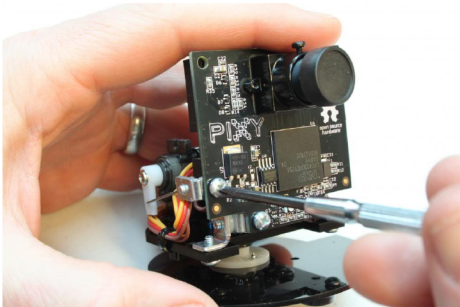

You're done!